


## Assembly Instruction Sheet #IS-RBN2823SG\_R1 For Style RBN2823SG

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (12) G9 Xenon Frosted bulbs (Supplied), 40W Maximum. Estimated Assembly Time: 20-30 minutes Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts. A Warnings and Cautions Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not touch the bulb with bare hands use a cloth or glove. Package Contents G9 Frosted (Step 2 Continued) Ľ В Xenon Bulb ¢ o x 12 height. Release your hand on the pin and move the cable clasp to the crossbar. Tight the set screw on the cable clasp until snug to engage Stem the cable. С x 27 B. Adjust the fixture supply wires until it is slightly longer than the cable. Move the wire clasp to the hex nut inside of the ceiling canopy. Trimming D x 27 STEP 3 - Make Wire Connections Fixture A. Use standard wire connectors (not included) to make all wire Body Rubber Α connections. Twist connectors until wires are tightly joined together. Е x 1 Washer Wrap each connection with approved electrical tape and carefully x 54 stuff all the connected wires into the Outlet Box. B. If the electrical wire is going to be cut shorter than provided, strip Lock Ball back the clear wire covering the 3 fixture wires as far as you need to. x 27 This will expose each fixture wire individually. Strip each end of 3 fixture wires. Allen Wrench G x 1 White wire White wire from outlet box from fixture Figure 3 STEP 1 - Install Crossbar Black wire Black wire from Outlet from fixture Assembly outlet box (or Red) Box M Bare, or Green Ground wire A. Unlock the lock ring from the Ground wire from Fixture bottom center of the ceiling Outlet Box from outlet box canopy and remove the crossbar Screw (not Ground wire assembly from the ceiling supplied) from Ceiling Canopy canopy. OR Crossbar B. Attach the crossbar assembly to Ground wire Assembly from Ceiling Canopy the outlet box and secure with Bare, or Green outlet box screws (not supplied). Ceiling Ground wire Tighten until snug with Ground wire Canopy from Fixture screwdrivers. from outlet box Lock Ring Figure 1 Green Ground Screw on the Crossbar STEP 2 - Adjust the Figure 2 **Fixture Body Height** STEP 4 - Install the Fixture Body Cable Clasp Outlet Box Crossbar A. By using the Allen A. Position the ceiling canopy onto the Assembly Wrench (G), unscrew crossbar assembly and secure with Pin Set Screw Crossbar the set screw on the the lock ring. Hand tighten until Assembly cable clasp. Push the Cable G snug. Wire pin on the bottom Ceiling Clasp Ceiling center of the Canopy Canopy crossbar and adjust Lock Ring the cable to your Lock Ring Supply Wire desired hanging Figure 4 Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com Revised Date: 2017-03-27 © 2017 Quoizel Inc. 1of2

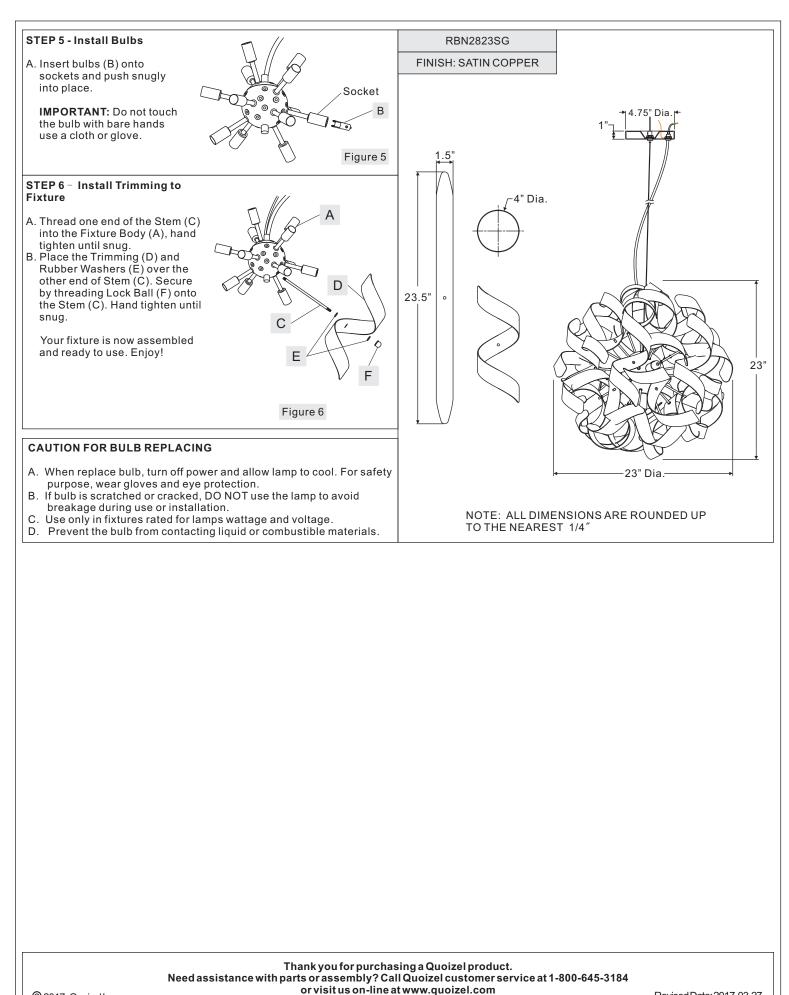

2of2