



Tools Required

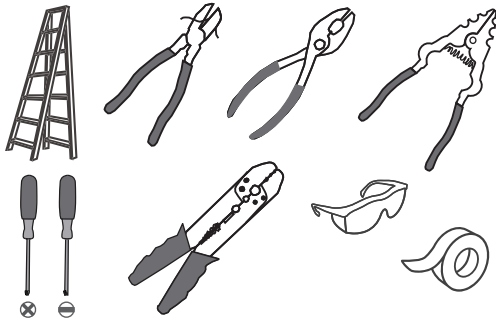

Light Source

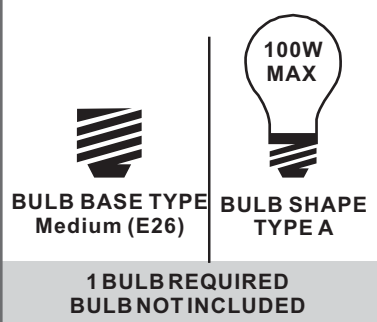

Fixture Height Adjustable
24.5" to 120.5"

Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.


PARTS BAG

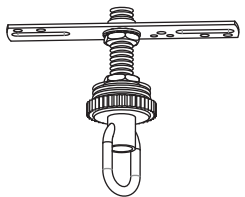


A Crossbar Assembly x 1




B Quick Link x 2

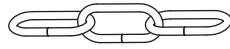

C Fixture Chain x 1

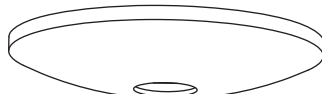

D Ceiling Canopy x 1

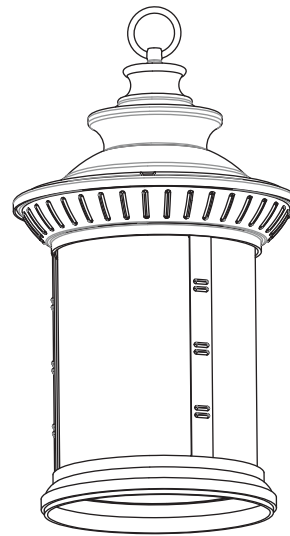


E Fixture Body x 1


Table of Contents

Remove Pack	Crossbar Assembly	Fixture Chain	Wiring	Ceiling Canopy	Bulb
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6

STEP 1

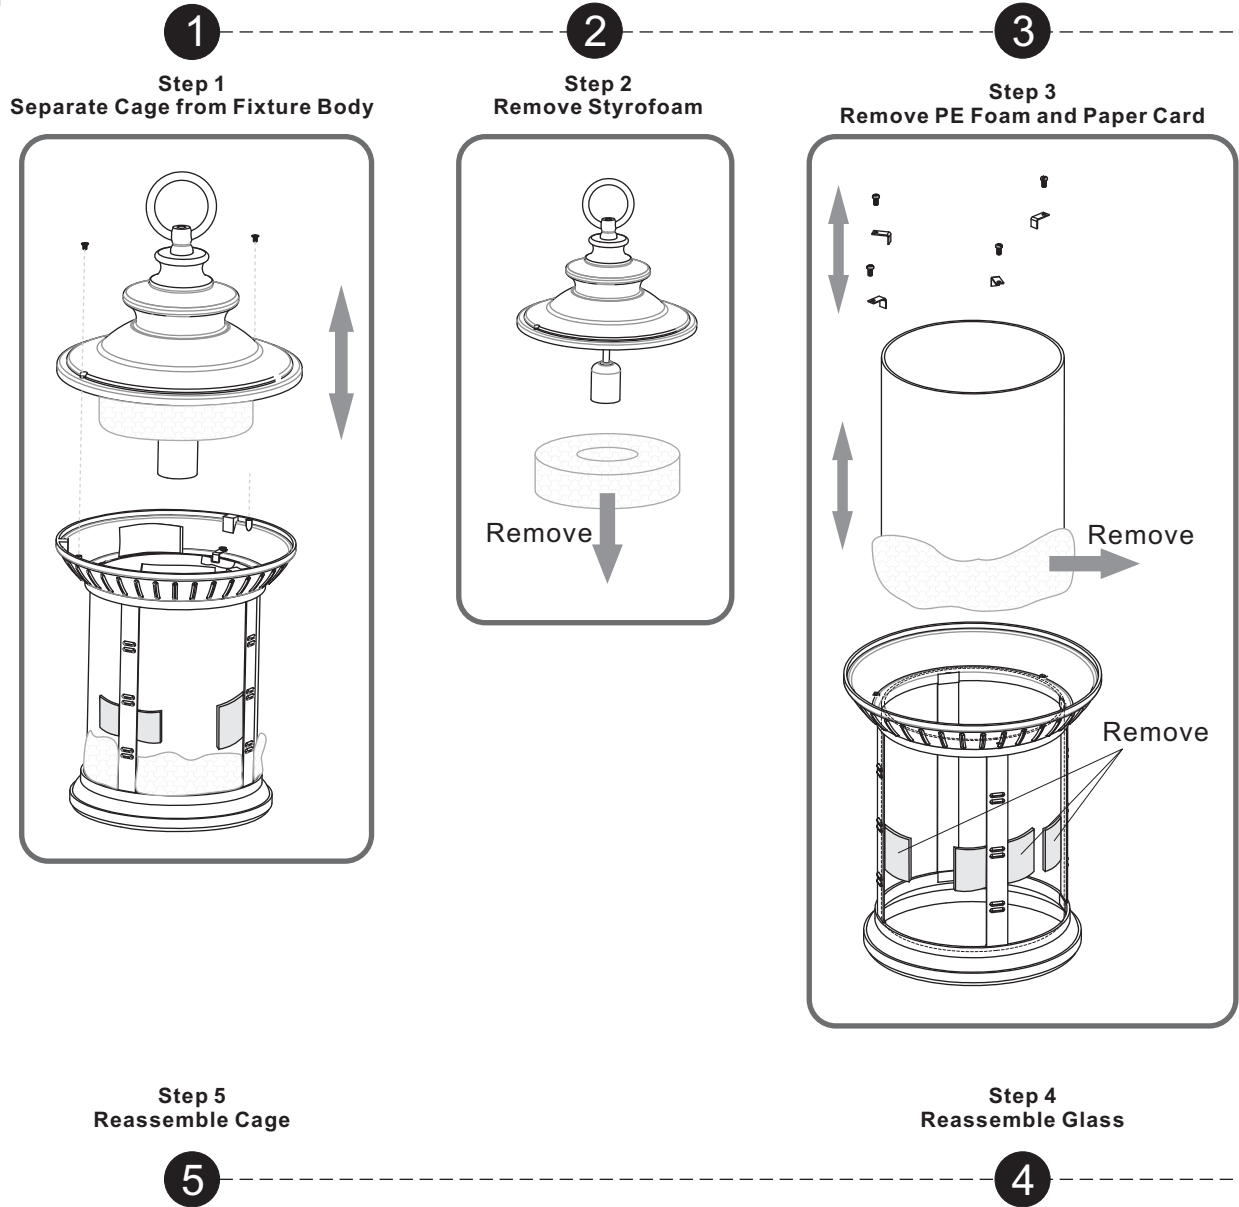


STEP 2

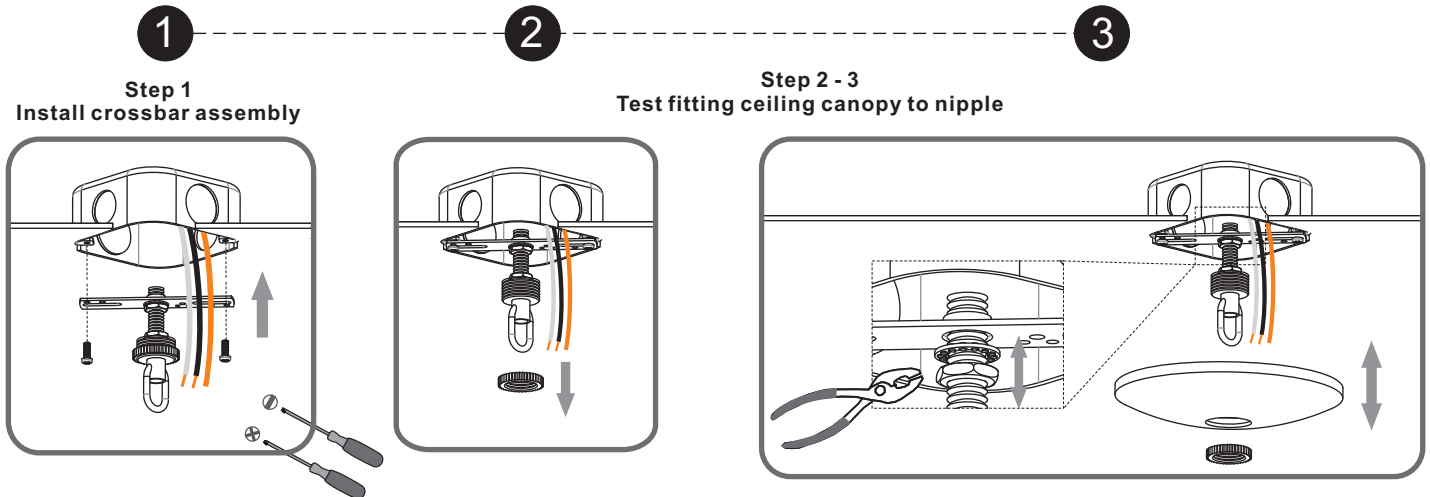

STEP 3

1

Step 1
Adjust fixture chain length


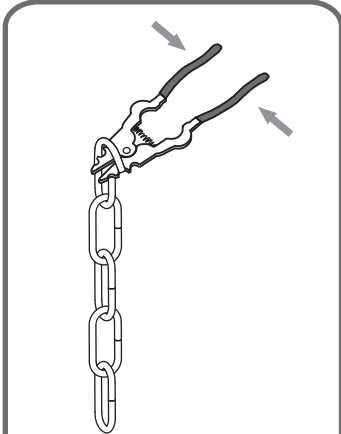


Suggested Chain Length:

- 8' ceiling: 10" Chain
- 9' ceiling: 22" Chain
- 10' ceiling: 32" Chain

2


Step 2 - 3
Install Fixture Chain

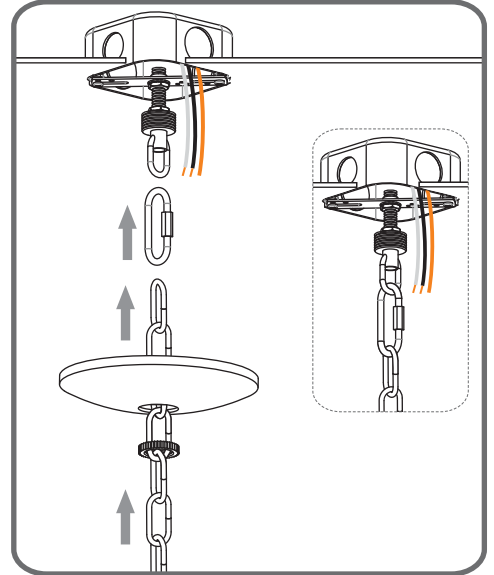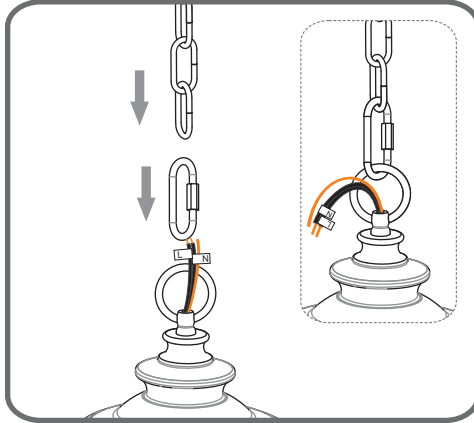


STEP 4

1


Step 1
Feed the fixture wires
through the loop

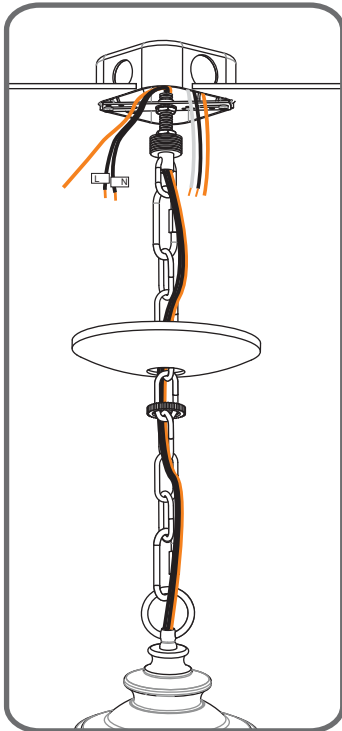

2

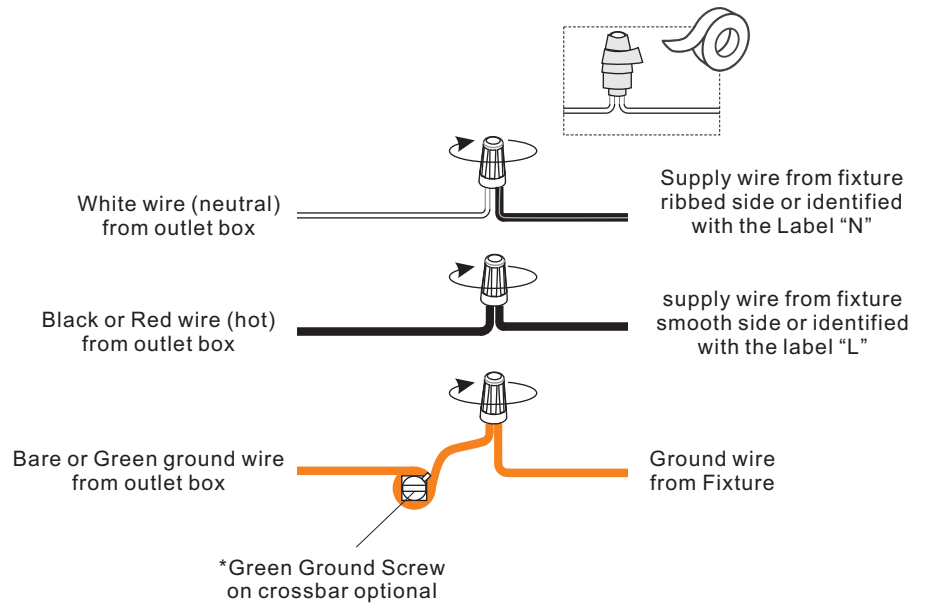

STEP 5

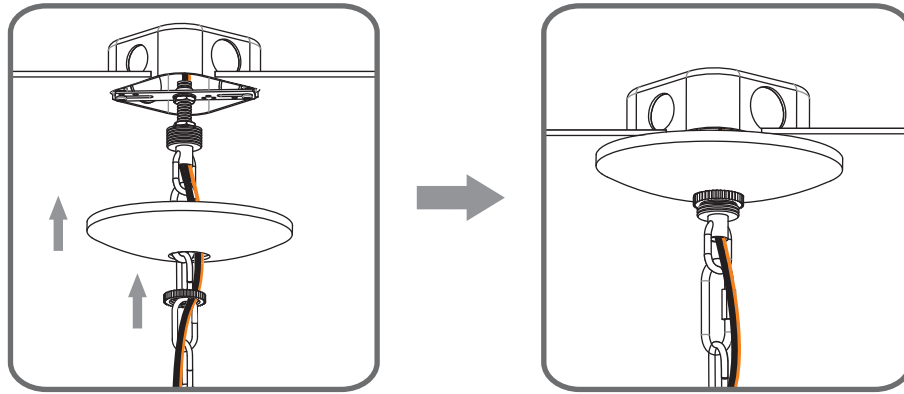

STEP 6

