QUOIZEL.

Installation Guide #IS-BST9011MB For Style BST9011MB

 $Please go to {\color{blue}www.quoizel.com} for product cleaning tips. Go to the {\color{blue}Care+Maintenance} selection.$

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses, marking pen, 1/16" drill bit, center punch, hammer, drill and wrench.

 $\textbf{Light Source:} (1) A 21 \, \texttt{Medium Base Bulb 150W Maximum}, \\ \texttt{Medium Base Vintage Bulb is recommended}, \\ \texttt{bulb not included}.$

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to ensure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents A Mounting Screw x 3 B Lock Screw x 2 D Fixture Body x 1


STEP 1 - Install Bulb and Fixture Hood

- A. Insert the bulb onto the socket and screw snugly into place.
- B. Place the Fixture Hood (C) onto the top edge of the Fixture Body (D). Thread Lock Screws (B) onto the top cover of the Fixture Body (D) until it is engaged to the neck of the cup inside of the Fixture Hood (C).

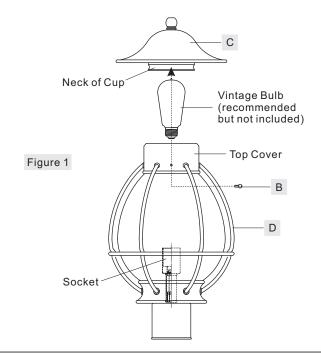


STEP 2 - Mark the Location for the 3 Mounting Holes

A. Place the light fixture onto the post and mark the location of the 3 mounting holes on the fixture fitter onto the post with the marking pen.

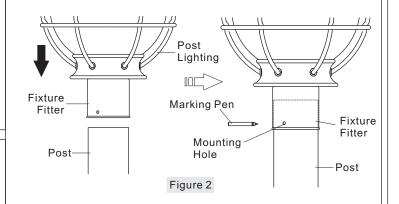


STEP 3 - Marking the Center of Each Mounting Hole

A. Remove the light fixture. Using the center punch and hammer marking the center of each mounting hole location that is marked with the marking pen.

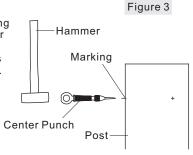

STEP 4 - Drill Holes

A. Using the 1/16" bit and drill, drill a pilot hole completely through the post at each (3) locations marked in step 3 above.

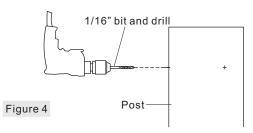

©2018 QuoizelInc.

visit us on-line at www.quoizel.com

Released Date: 2018-10-08

